


Operating Instructions
Heated Pizza Display
Model NIKLAS order no. 330-1095

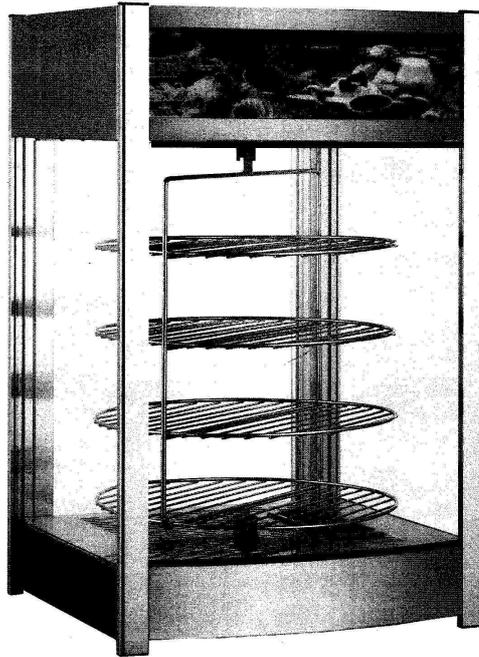

CONTENTS

1. General Information
2. Safety Notes
3. Transportation and Placement
4. Operation
5. Cleaning
6. Technical Data and Special Features
7. Circuit Diagram
8. Waste Disposal

1. General Information

- Carefully read these operating instructions through as they contain important information for the safe and correct use of the appliance.
- It is advisable to keep the operating instructions in a place where you have them always ready to hand.
- If you pass the appliance to a third party, these operating instructions should be handed over.
- Dispose the packing material according to the local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc.) must not be left within reach of children, in that they are potential sources of danger.
- As soon as you have unpacked the heated display, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- The heated display must only be used for the intended purpose, like showing or storage of hot products/food. Improper use can cause damages and lead to the loss of the warranty.
- In case of fault and/or malfunction, pull the power plug from the socket and inform your dealer. He will carry out the repair with original spare parts.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, the safety of the heated display is no longer guaranteed.

2. Safety Notes

- Connect the heated display to a properly installed and grounded single power socket. Do not connect any other appliance to the same outlet.
- The outlet must be easily accessible, so that the plug can easily be removed in the case of emergency.
- If you pull the plug from the socket, always pull at the plug and never at the cable.
- The cable must not come into contact with water or hot parts.
- Do not touch the cable and the plug with moist or wet hands.
- Regularly check the cable. If it is damaged, it must be exchanged by a specialist.
- Do not block the air intake openings in the heated display. They have to be cleaned from time to time, because dirt and dust can block the slots.
- Do not place any heavy objects on top of the heated display.
- Never put dangerous products (flammable and explosive) nearby the heated display.
- The heated display is to be used indoors only.
- Repairs may only be undertaken by a qualified specialist using original spare parts.
- Do not attempt to repair the heated display by yourself.
- Ensure that children do not play with heated display respectively the door.
- Before each cleaning or repair pull the power plug out of the socket.
- Do not use a wet rag (only moist), high pressure cleaner or a jet of water.
- If you do not need the heated display for a long time, pull the plug from the socket and clean everything (see point 5 "Cleaning").

3. Transportation and Placement

- Please be careful during the transportation or moving of the heated display.
- Take good care of the glass panes to prevent breakage.
- Dispose the packing material according to the local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc.) should not be left within reach of children, in that they are potential sources of danger.
- Place the heated display on a stable, dry and even surface.
- The distance from both sides and back of the appliance to wall must be at least 10 cm.
- Keep the heated display out of direct sun or other heat sources to ensure correct temperatures can be achieved.
- Do not block the air intake openings in the heated display.
- The rotating grids you can take out of the heated pizza display by dragging them to the top of the lift guide, then take out from the bottom pivot point and remove it.

4. Operation

- Clean the heated display and the grids with a moist cloth and a mild cleaning detergent. Dry everything carefully. Do not use aggressive detergents, steel wool or high pressure cleaner or a jet of water. (See also under point 5 "Cleaning")
- Remove the water bowl and then fill the bowl with water and put it into the appliance. If you want to put products into the heated display, requiring no humidification, then leave the bowl without water.
- Put the plug into the plug socket.
- Switch on the heated display by pressing the button located on the top of the back. Next to it is the switch for the interior lighting, and the switch for turning the grids.
- Avoid unnecessary opening of the door.
- Ensure the door is properly closed at all times.
- During power failure open the door rarely and for short time only. Do not insert further food.
- The heated display has on the back above an analog temperature display. Here you can see the desired indoor temperature.
- On the back there is a temperature display also, which allows you to set the desired temperature between 30° and 90°C.


5. Cleaning

- Clean the heated display regularly.
- Before each cleaning pull the power plug from the socket.
- Clean the exterior surfaces and the grids with a soft, damp, warm cloth and a commercial detergent. Wipe off and dry everything carefully.
- The water bowl has to be descaled from time to time and the glass panes can be cleaned with a cleaning detergent for windows.
- Do not use aggressive detergents, steel wool or abrasive sponges. The heated display may not be hosed down with water.
- Brush off from time to time the dirt from the slots in the interior of the heated display. Use at the same time a vacuum cleaner.
- If you do not need the heated display for a long time, pull the plug from the socket and clean everything as described above.

6. Technical Data and Special Features

Material	tainless steel 4 rotating chromed grids door on the back water pan to moisturise the air
Capacity	appr. 97 litres
Temperature adjustable	+ 30°/ + 90°C
Power connection	230 V / 1 Ph / 50 Hz / 1,2 kW
Weight	22 kg
Dimensions (exterior)	W 460 x D 448 x H 785 mm

7. Circuit diagram

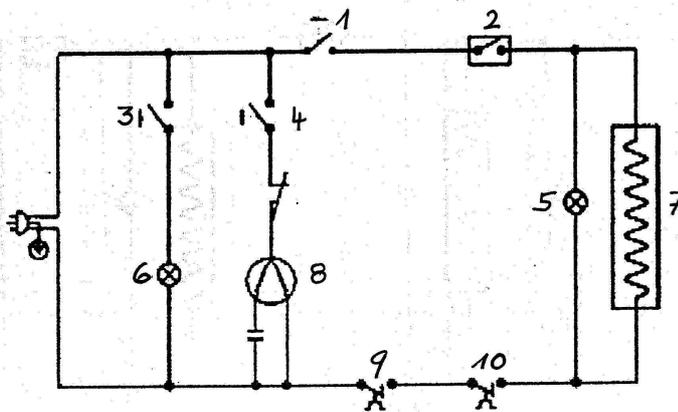

- 1 Switch
- 2 Thermostat
- 3 Lamp switch
- 4 Motor switch
- 5 Indicator light
- 6 Lamp
- 7 Heating element
- 8 Motor
- 9 Controller
- 10 Controller

8. Waste Disposal



For the disposal of the device follow the regulations applicable in your country.