



CD213 Parasol Base Assembly Instructions

For use with:
CB512/CB513/CB514/CB515/CB516/CB517

Pack Contents

- A. Bolt x 1
- B. Washer x 1
- C. Base x 1
- D. Plate x 1
- E. Pole Base Cover x 1
- F. Pole x 1
- G. Screw x 1
- H. Ring Adapter x 3



Note: Be sure to check all packaging materials for any small parts that may have come loose during transportation.

Assembling


1. Insert the bolt and washer into the underside of the parasol base.
2. Slot the Plate onto the protruding bolt.
3. Slide the Pole Base Cover onto the end of the Pole.
4. Screw the pole on to the protruding bolt.
5. Insert the required amount of Ring Adaptors for the size of the pole. A 38mm pole will require all 3 adaptors.



Note: Position the notch in the edge of the Ring Adaptors above the screw hole. The extended edge of the Ring Adaptor then stops the screw from scratching the Umbrella Pole.



WARNING: Attempting to use this product with a Parasol in high winds may be hazardous and could result in injury and or damage to the product.

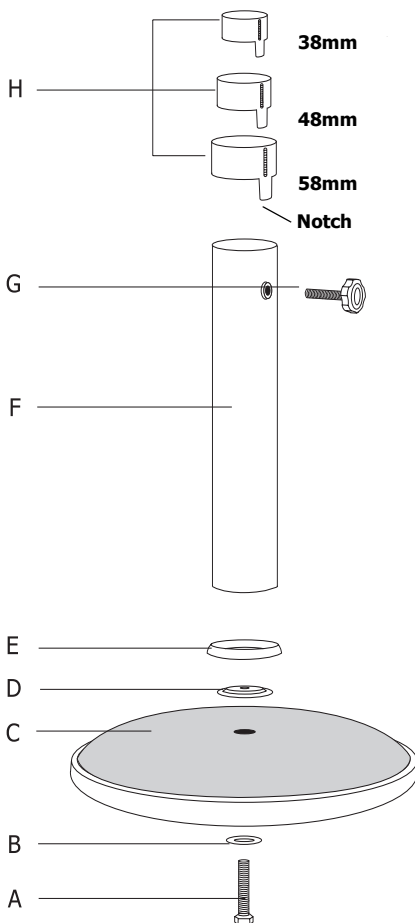

BOLERO Telephone Helpline: 0845 146 2887

BOLERO, Fourth Way, Avonmouth, United Kingdom, BS11 8TB