



P: 1/5


### HORIZONTAL OUTLET DRAINAGE CHANNEL INSTALLATION MODEL: 7075.0135

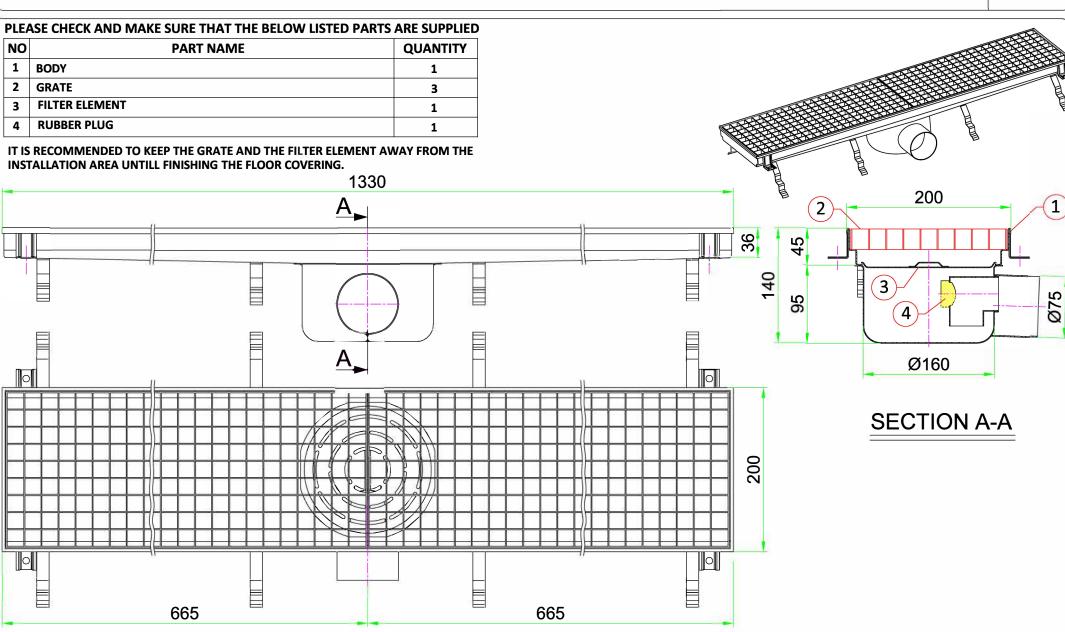

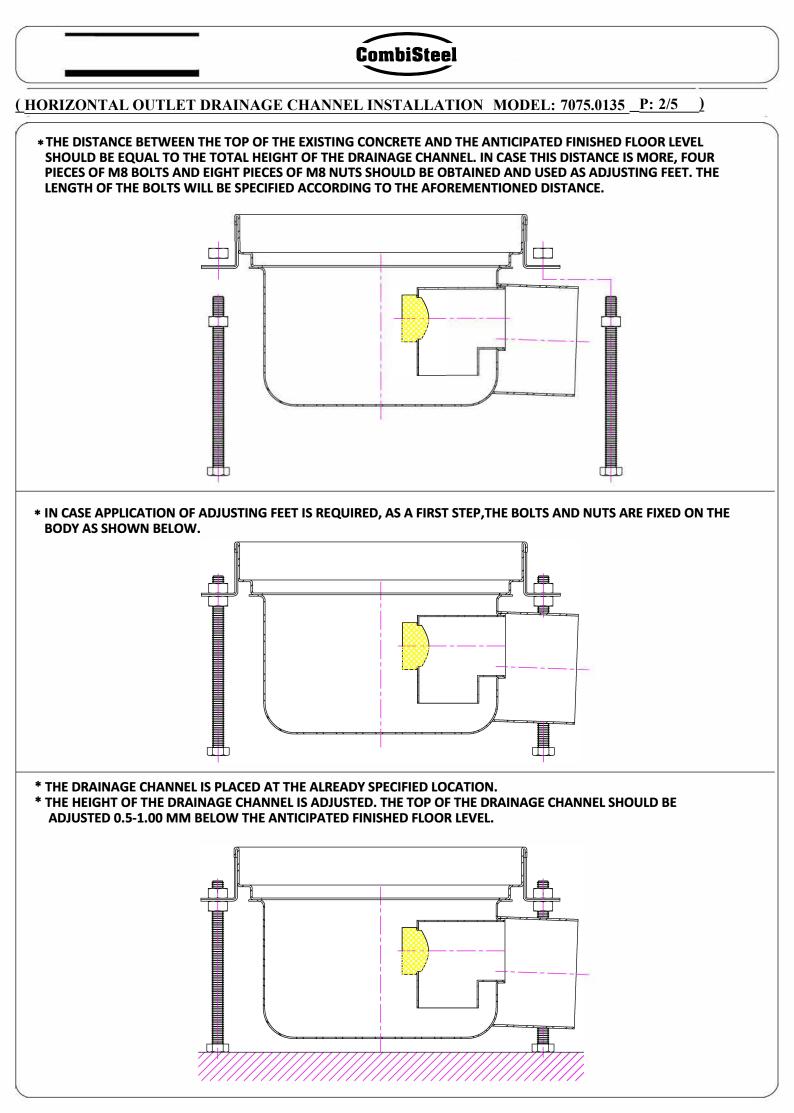

# CombiSteel


#### (HORIZONTAL OUTLET DRAINAGE CHANNEL INSTALLATION MODEL: 7075.0135 <u>P: 3/5</u>)

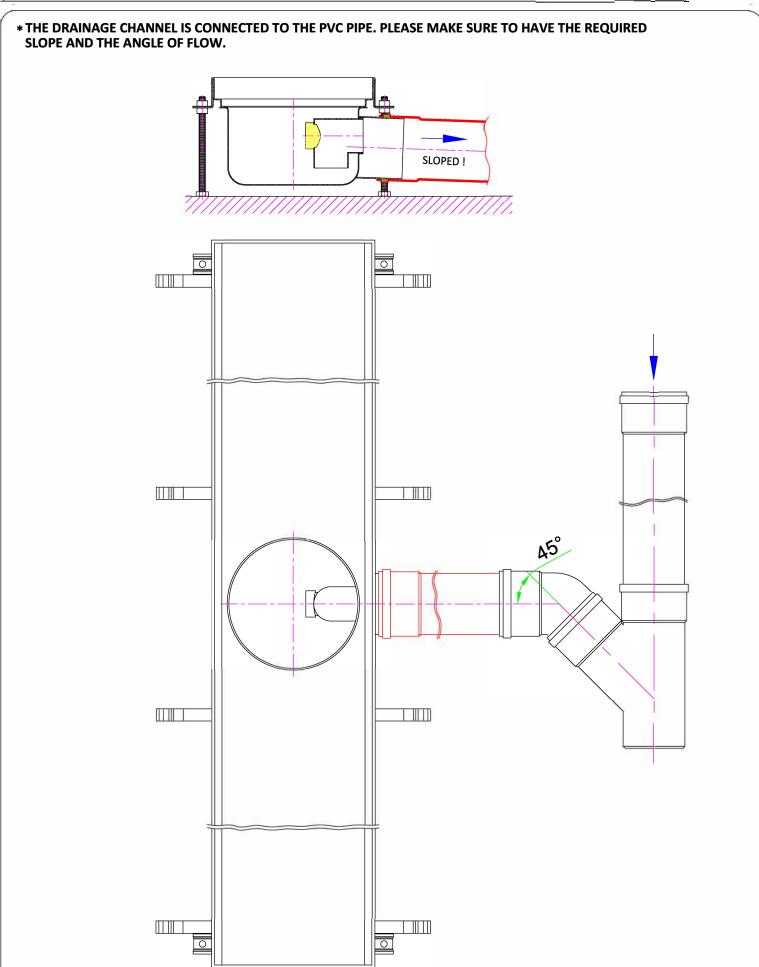




## (HORIZONTAL OUTLET DRAINAGE CHANNEL INSTALLATION MODEL: 7075.0135 P: 4/5 )

\* APPROXIMATELY 30-40 MM OF CONCRETE IS POURED AT THE BOTTOM OF EACH FOOT AND LEFT TO CURE. MAKE SURE THAT THE DRAINAGE CHANNEL IS KEPT UNTOUCHED TILL THE CONCRETE IS PROPERLY CURED.

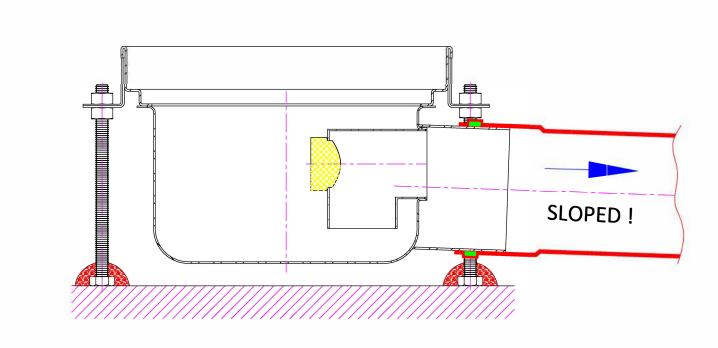

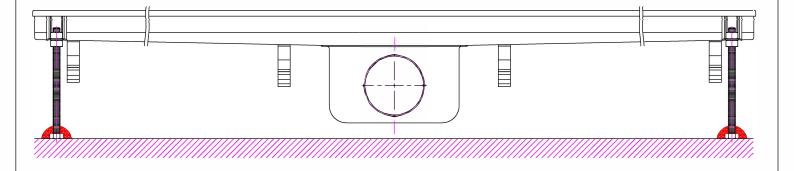



#### (HORIZONTAL OUTLET DRAINAGE CHANNEL INSTALLATION MODEL: 7075.0135 <u>P: 5/5</u>)

\* THE WHOLE GAP AROUND AND UNDER THE DRAINAGE CHANNEL SHOULD BE FILLED WITH CONCRETE GRADUALLY AND HAVE A SMOOTH TOP SURFACE.

\* AS THE LAST STEP, TILING IS APPLIED.

